



## Step C3



Next, sew the piping onto the gussets. The piping should face the interior, while the seam allowance faces the exterior. The ends of the piping should be placed at the bottom center. You can cover the ends with a scrap piece of piping (tubing removed).

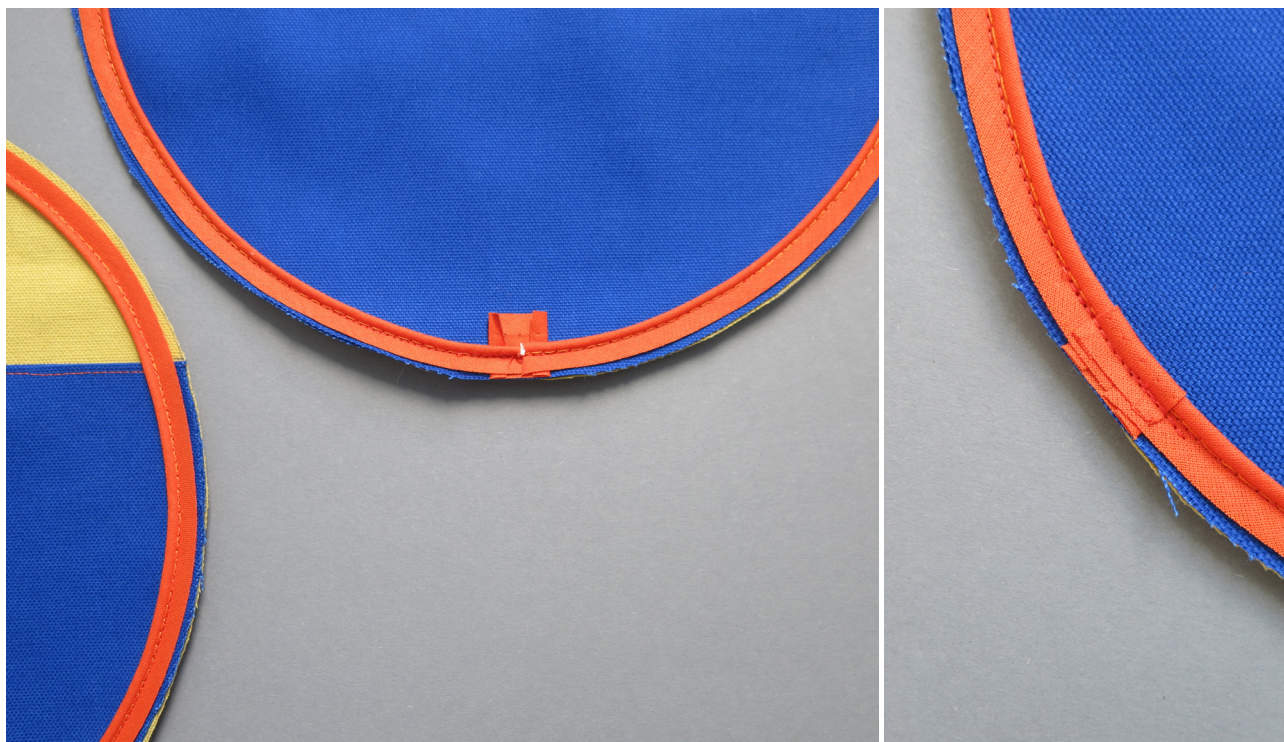

## Step D1 - creating the front and back

This step is similar to the gusset pockets: fold the front and back pockets in the center, good sides facing out. Topstitch the top edge of the pocket.

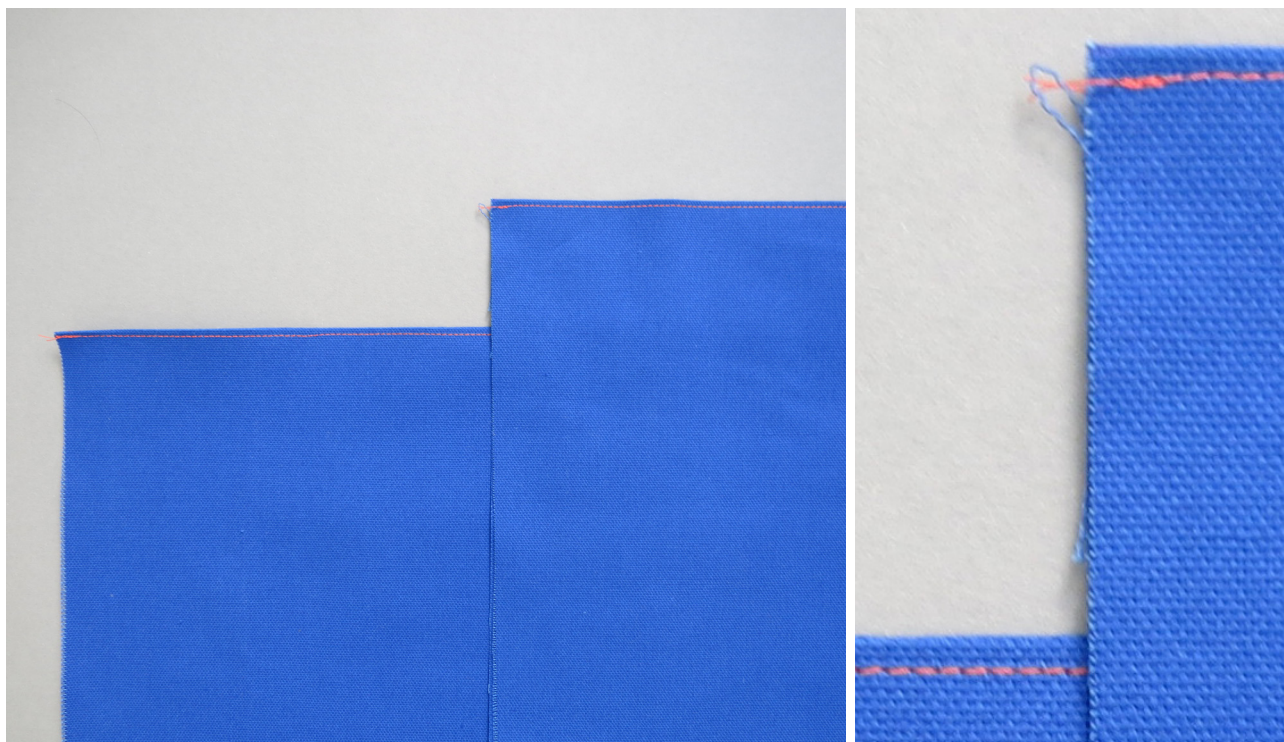

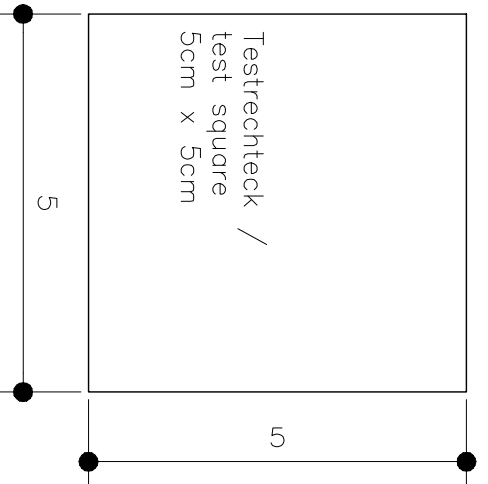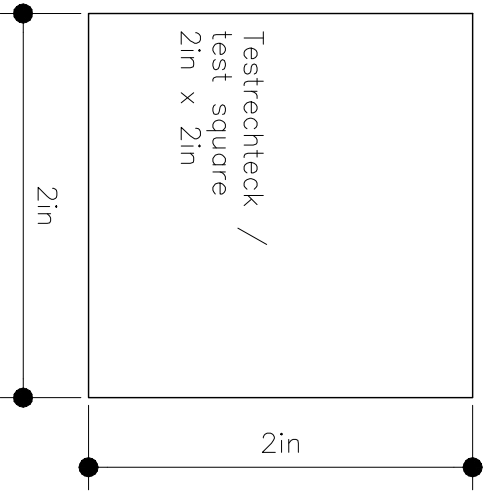

A